

# DATASHEET

## FFP MASKS

PROTECTION AGAINST DUST, MIST & FUMES



### Classic Series

#### FFP1 NR D



**2360<sup>+</sup>** non valved



**2365<sup>+</sup>** with Ventex®-Valve

#### FFP2 NR D



**2400<sup>+</sup>** non valved



**2405<sup>+</sup>** with Ventex®-Valve

#### FFP3 NR D



**2555** IonicAir®  
with Ventex®-Valve

#### CHARACTERISTICS



##### ActivForm®

Automatically fits to the face.  
No manual adjustments by the user are necessary.




##### DuraMesh®

Masks have a strong and durable structure.



##### Ventex®-valve

Starts to open even at low exhalation pressure and significantly reduces moisture and heat inside the mask.

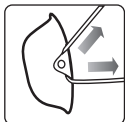

##### Adjustable Strap

Makes it easier to take the mask on and off and to adjust to different head/neck dimensions.



##### Dolomite clogging test

Masks have passed the Dolomite clogging test.  
Better breathing resistance for longer.



##### 100% PVC-FREE

All Moldex products and packaging are completely free from PVC.

**NR (non reusable):** Single use.  
Comfortable and durable throughout the whole shift.

#### CERTIFICATION

The Moldex Classic Series FFP-masks meet the requirements of EN149:2001 + A1:2009. The products are CE-marked in accordance with the requirements of EU regulation (EU)2016/425. The IFA (0121) in St. Augustin (Germany) is responsible for type examination (Module B) and monitoring of production (Module D).

The products are manufactured in an ISO 9001 certified plant.

#### MATERIALS

**Filter Layer, Inner Shell, DuraMesh®:** Polypropylene, Ethylene-vinyl acetate (EVA)

**Head Strap, VentexValve®:** Natural Rubber

#### WEIGHT

**2360<sup>+</sup>:** 12 g **2365<sup>+</sup>:** 16 g **2400<sup>+</sup>:** 10 g **2405<sup>+</sup>:** 16 g

**2555 IonicAir®:** 17 g

#### AREAS OF USE

Level	WEL	Hazard type Examples
FFP1	4 x	FINE DUSTS, FUMES, WATER AND OIL BASED MISTS/ AEROSOLS Non-toxic dusts, cellulose, coal dust, limestone, pollen, sugar
FFP2	10 x	HAZARDOUS FINE DUSTS, WATER AND OIL BASED MISTS/ AEROSOLS, BIOLOGICAL AGENTS OF RISK GROUP 2 As FFP1 but at higher concentrations, plus toxic dusts, aluminum oxide, bauxite, borax, brick dust, cement, gypsum, calcium oxide, concrete dust, granite, chromium, mould, wood dust (softwood), zinc oxide fume
FFP3	30 x	HARMFUL AND CARCINOGENIC DUSTS, WATER AND OIL BASED MISTS/ AEROSOLS, BIOLOGICAL AGENTS OF RISK GROUP 2 AND 3, CMR-SUBSTANCES As FFP2 but at higher concentrations, plus carcinogenic substances, ceramic fibres, brake dust, chromates, lead dust and fume, cobalt, nickel, wood dust (hardwood), micro organisms, radioactive and biochemical active aerosols, enzymes, viruses

(WEL = Workplace Exposure Limit)

# DATASHEET

## FFP MASKS

PROTECTION AGAINST DUST, MIST & FUMES



### TESTING ACCORDING TO EN 149:2001 + A1:2009

#### Total inward leakage

Ten test subjects perform a variety of exercises. During the exercises the amount of test aerosol that penetrates the filter, face seal and valve are sampled. The total inward leakage of 8 out of 10 test subjects shall not exceed the following levels:

Category	FFP1	FFP2	FFP3
max. total inward leakage	22 %	8 %	2 %

The filter penetration after loading the filter with 120 mg paraffin oil according to DIN EN 149:2001 + A1:2009 shall not exceed the following levels:

Category	FFP1	FFP2	FFP3
max. Filter penetration	20 %	6 %	1 %

#### Flammability

4 respirators are passed through a 800°C (+/- 50°C) flame with a speed of 6 cm/s. After passing through the flame the respirator has to self-extinguish.

#### Breathing Resistance


The breathing resistance produced by the filter of the respirator is tested at an airflow of 30 l/min and 95 l/min.

Category	max. breathing resistance according to EN 149	
	30 l / min	95 l / min
FFP1	0,6 mbar	2,1 mbar
FFP2	0,7 mbar	2,4 mbar
FFP3	1,0 mbar	3,0 mbar


### INSTRUCTIONS FOR USE

- The user has to be trained and instructed in wearing the mask.
- FFP Masks do not protect against gases and vapours.
- The oxygen concentration of the ambient atmosphere should be at 19,5 % Volume.
- These respirators may not be used if the concentration type, and properties of contaminants in the ambient atmosphere are unknown or at dangerous levels.
- Respirators should be disposed if damaged, if the breathing resistance becomes high due to clogging, or at the end of a shift.
- Never tamper with, alter or modify the respirator.

### INSTRUCTIONS FOR FITTING

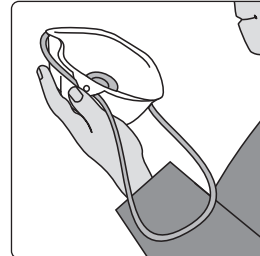


1. Pull strap to form a large loop.

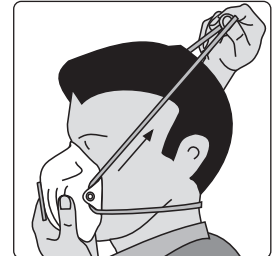

3. Pull upper strap tight and then place on back of head.



2. Place respirator on chin and pull loop over head tight to the neck.

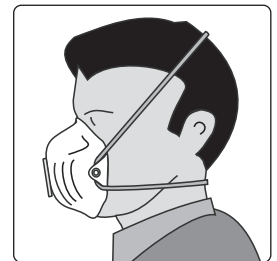

4. Ensure respirator fits secure and comfortable.

### INFO

For help on selection and training please contact us. We offer a wide range of training packages and support material.

MOLDEX/METRIC AG & Co. KG  
Tübinger Straße 50  
72141 Walddorfhäslach  
Germany

Tel.: +49 (0) 71 27/81 01-02  
Fax: +49 (0) 71 27/81 01-48  
info@moldex-europe.com  
www.moldex-europe.com