






DATASHEET

REUSABLE EARPLUGS

PROTECTION AGAINST NOISE



	Rockets®³⁰	6400
	Rockets®³⁰ Cord	6401
	Rockets® Full Detect	6409

	Comets®	6420
	Comets® Cord	6421

CHARACTERISTICS



Washable

Plugs made of soft durable material – washable and hygienic.



Comfortable Seal

Air bubble in the tip and soft material provides a comfortable seal.



Cords®

Allows the plugs to be worn around the neck.



Rockets®³⁰

A solid handle ensures easy insertion and maximum comfort, at a high protection level.




Rockets® Full Detect

An imbedded metal ball and the detectable cord make this plug fully detectable.



Comets®

Protection against lower noise levels. Designed to keep the user in touch with the environment.

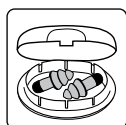

PocketPak®

All reusable plugs come with the practical one pair storage container.



100% PVC-FREE

All Moldex products and packaging are completely free from PVC.

CERTIFICATION

The Moldex range of hearing protection products meet the requirements of EN 352-2 and are CE-marked in accordance with the requirements of EU regulation (EU)2016/425.

Responsible for type examination (Module B):

“Rockets®³⁰”, “Rockets®³⁰ Cord” and “Rockets® Full Detect”: FIOH (0403) in Helsinki (Finland)

“Comets®” and “Comets® Cord”: IFA (0121) in St. Augustin (DE).

Responsible for monitoring of production of all products (Module D):

IFA (0121) in St. Augustin (DE).

The products are manufactured in an ISO 9001 certified plant.

According to the German regulation DGUV-Regel 112-194, “Comets®”, “Rockets®³⁰”, “Rockets®³⁰ Cord” and “Rockets® Full Detect” fulfil the criteria “hearing of general warning signals”, “comprehensible speech” and “signal noise in road traffic”.

ATTENUATION DATA

The Moldex range of hearing protection products passes the EN 352-2 minimum attenuation requirements. The tables below show the full attenuation data for Moldex products.

Rockets®³⁰ (6400) / Rockets®³⁰ Cord (6401)

Freq. (Hz)	63	125	250	500	1000	2000	4000	8000
M _f (dB)	31.3	32.0	30.4	31.9	32.4	34.5	42.0	41.8
s _f (dB)	5.7	8.2	7.2	8.8	6.6	4.8	3.1	3.6
APV _f (dB)	25.6	23.8	23.2	23.1	25.8	29.7	38.9	38.2
Size: 7-11	H = 31 dB		M = 26 dB		L = 24 dB		SNR = 30 dB	

Rockets® Full Detect (6409)

Freq. (Hz)	63	125	250	500	1000	2000	4000	8000
M _f (dB)	27.4	27.3	25.7	27.1	27.2	33.3	36.4	40.8
s _f (dB)	4.7	5.5	5.3	6.1	5.0	6.1	3.1	3.4
APV _f (dB)	22.7	21.8	20.4	21.0	22.2	27.2	33.3	37.4
Size: 7-11	H = 28 dB		M = 23 dB		L = 22 dB		SNR = 27 dB	

DATASHEET

REUSABLE EARPLUGS

PROTECTION AGAINST NOISE



Comets® (6420)/Comets® Cord (6421)

Freq. (Hz)	63	125	250	500	1000	2000	4000	8000
M _f (dB)	25.7	26.0	25.8	27.7	26.5	30.3	33.9	40.2
s _f (dB)	4.4	4.2	4.6	3.2	3.4	6.0	5.1	7.7
APV _f (dB)	21.3	21.8	21.2	24.5	23.1	24.3	28.8	32.5
Size: 8 - 11	H = 26 dB		M = 22 dB		L = 21 dB		SNR = 25 dB	

MATERIALS

Rockets®³⁰, Rockets®³⁰ Cord: Thermoplastic Elastomere (TPE), Ethylene-vinyl acetate (EVA)
Comets®, Comets® Cord: TPE
Rockets® Full Detect: TPE, EVA, Metal (Iron)
PocketPak®: Polypropylene

WEIGHT

Rockets® (per pair)

6400: 2.4 g 6401: 3.5 g 6409: 3.8 g

Comets® (per pair)

6420: 1.9 g 6421: 3.1 g

PocketPak®:

6.6 g

TESTING

The earplugs of the Moldex Hearing Protection range have been tested to EN 352-2 and fulfil all requirements of the relevant categories.

Ignitability

The earplugs shall not ignite upon application of a heated rod, nor continue to glow after the removal of the heated rod.

Construction

All parts of the earplugs are designed and manufactured so that they are not liable to cause physical damage to the wearer when fitted and used according to the instructions.


INSTRUCTIONS FOR USE

- The products must be used in accordance with the relevant national legislation.
- Warning: disregarding the instructions for use and fitting instructions for these products can affect the product efficiency in protecting against noise.
- The products should be stored in a cool, dry environment.
- The products may be adversely affected by direct contact with certain chemical substances (e.g. aromatic hydrocarbons).
- The products are reusable provided the hygiene of the product is maintained between uses. Clean with mild soap and water.


INSTRUCTION FOR FITTING ROCKETS®



1. Reach above the head and pull the ear gently upwards.

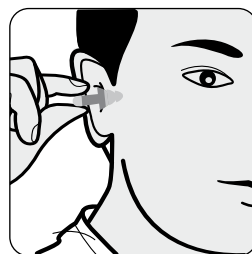


2. Grip the plastic handle of the Rocket plug and slide the plug into the ear canal. Rotating the plug slightly whilst inserting may help.

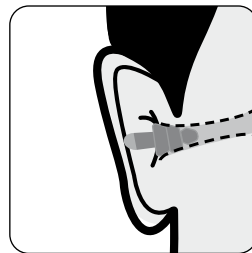


3. The plug will then be correctly positioned in the ear canal ensuring it offers maximum hearing protection.


COMETS®

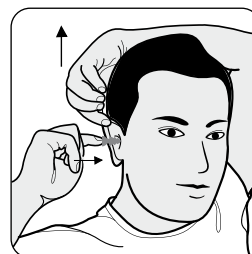

1. Reach above the head and pull the ear gently upwards.

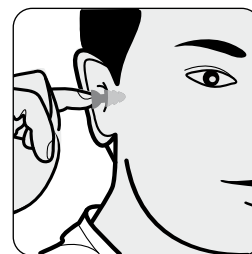

2. Slide the plug into the ear canal. Rotating the plug slightly whilst inserting may help.

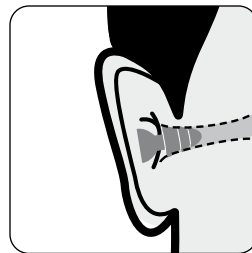

3. The plug will then be correctly positioned in the ear canal ensuring it offers maximum hearing protection.

INFO

For help on selection and training please contact us. We offer a wide range of training packages and support material.

Moldex-Metric AG & Co. KG
Tübinger Straße 50
72141 Walddorfhäslach
Germany

Tel.: +49 (0) 71 27/81 01-175/176
Fax: +49 (0) 71 27/81 01-48
info@moldex-europe.com
www.moldex-europe.com